



lifestyletable™

INSTRUCTIONS

Please read ALL instructions CAREFULLY before commencing installation.

WARNING:

ISOLATE ALL SERVICES BEFORE COMMENCING INSTALLATION.

Ensure area of installation is clear of all services eg electrical wiring. Failure to do this may result in services damage. If unsure, consult with your local caravan repairer or manufacturer.

WARRANTY:

This product is covered for workmanship and material for replacement only. Installation and freight costs are not included. Any claims after installation will not be accepted.

FIXING OF TABLE REQUIRES:


Fastening to vertical, internal frame members if available, is desirable, but not essential. Some fibreglass and composite walled vans will not have a internal frame. The table can still be installed onto these vans.

CONTENTS:

- 1 x Lifestyletable™
- 1 x Back panel
- 20 x Rivets (28ASP66)
- 2 x Keys (keyed alike)


TOOLS REQUIRED:

- Drill (electric)
- Phillips screwdriver
- 5.5mm drill bit
- Rivet gun
- Silicone gun
- Marker pen/pencil
- Silicone (recommend white Sikaflex)
- Screws if required.

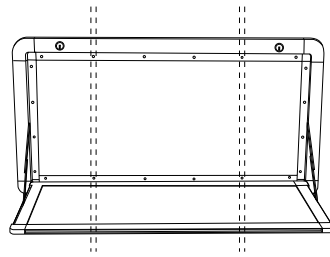

STEP 1

- Position table in desired location.

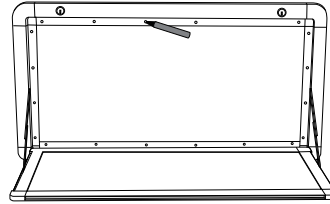


STEP 2

- Mark one hole on the van wall through a hole located towards the centre of the top table wall frame.
- Remove the table.




STEP 3

- Carefully drill marked hole 5.5mm drill bit

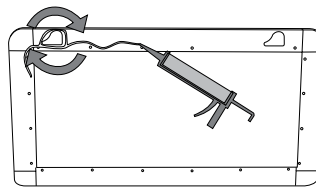


STEP 4

- Lay the table face down onto a clean surface.
- Place the supplied lock cover sticker over the lock holes.
- Apply silicone to the rear of the table around the inner perimeter and around the lock cutouts.

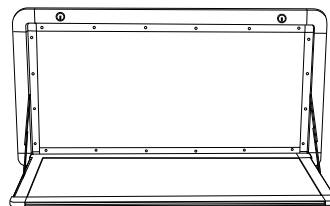


STEP 5

- Position the table back onto the caravan wall aligning with the pre-drilled hole. Ensure the top of the table is square to the van wall and rivet.

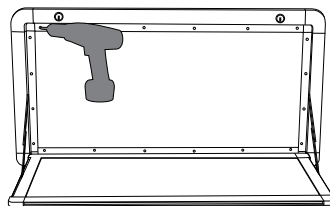


STEP 6

- Check for square and drill and rivet another hole in the top frame.

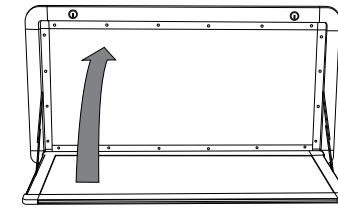


STEP 7

- Check the table flap closes evenly into the frame on both sides. Adjust vertical frame left or right as necessary.
- Drill and rivet one hole only on one vertical frame

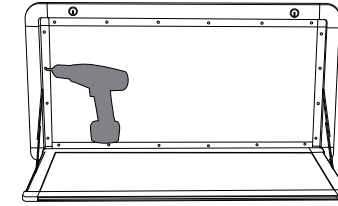


STEP 8

- Again, check that the table flap closes evenly into the frame on both sides. Adjust vertical frame left or right as necessary.
- Drill and rivet one hole only on the opposite vertical frame.

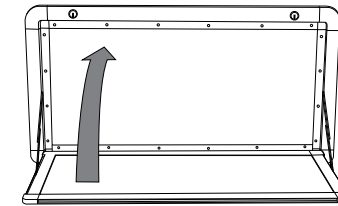

STEP 9

- Again check that the table flap closes evenly into the frame on both sides.
- Drill and rivet remaining holes.
- Ensure all rivet heads are flush and even.

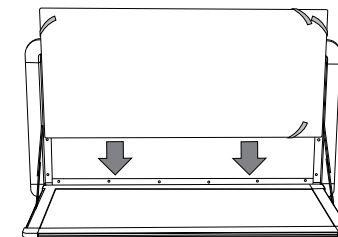


STEP 10

- Remove approximately 100mm of backing off double sided tape from all four corners and fold to front of panel.
- Slide and flex into position and gently pull backing tape to front of panel. Beware of tape sticking before final placement.
- Firmly push panel into frame to activate the tape.

TIPS

DEEP PROFILE CLADDING

Where deep profiled cladding is encountered, packing around rivets along top of table frame is required, to stop the top extrusion from flexing inwards and interfering with the locking mechanism. (Plastic tiling wedges are a good packing medium)

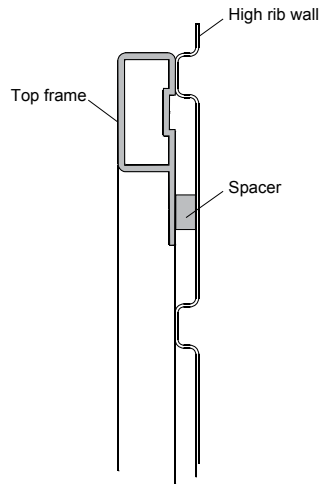


FINISHING OFF EDGE OF TABLE

Option 1

After installation, run a bead of silicone around the rear edge of the table and the caravan wall. Finish off neatly.

Option 2 - for profiled wall caravans

Before riveting to the caravan wall, lay the table down, rear side up, and apply a length of compressible grey foam tape (about 10 x 10) around the rear outside edge of the table's wall frame. Ensure it sits neatly with the outside edge of the table frame. Then continue from Step 4 in the instructions.

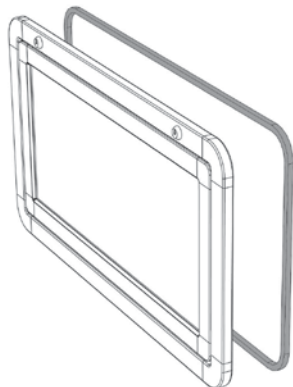

WORKING WITH SILICONE

Suggested equipment for working with silicone successfully.

1. Good quality silicone gun
2. Spray water bottle containing a mixture of water and dishwashing detergent. Ratio 50:1
3. Paper towelling (or toilet paper roll)
4. Finishing tool (if a square edge finish is required)
5. Eucalyptus oil
6. Rubbish bin / bag

Using Silicone

1. Use silicone sparingly. Only apply sufficient to the requirement of the job.
2. When finishing off silicone joints, first lightly spray with water and detergent mixture, then with a wet finger or finishing tool, remove excess silicone. Clean finger or tool on paper towel and discard used paper towel. Repeat this process using long even strokes.
3. Use eucalyptus oil and paper towel to clean any spilled silicone from surfaces before it sets.
4. Keep silicone away from all moving parts.


CLEANING

Use only warm soapy water to clean the table.

No abrasives, chemicals or solvents.

WARNING


Release flap stays before closing table as this relieves strain and potential damage to the structure of the table.

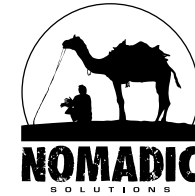

lifestyletable™



INSTRUCTIONS

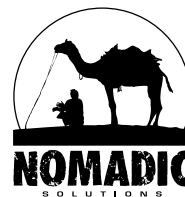

Nomadic Solutions Pty Ltd

P: 02 9011 8144

www.nomadicsolutions.com.au



Australian Registered Design: 318713
European Community Registered Design No. 000938972-0001
USA Design Patent: No. D604080